
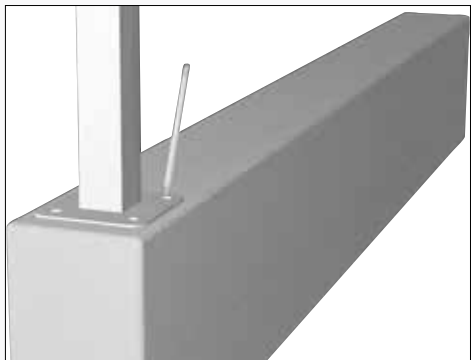


01. post installation


INSTALLATION OF **ANCHOR** AND **IMMERSION POSTS**, GALVANIZED AND ALUMINUM

SPACING FOR FENCING


- **PRIVACY TREND DELUXE** with aluminum post: **1500mm**
- **PRIVACY DELUXE** with WPC post: **1520mm**
- **VEDO NON VEDO TREND DELUXE** with aluminum post: **2040mm**
- **VEDO NON VEDO DELUXE** with WPC post: **2060mm**

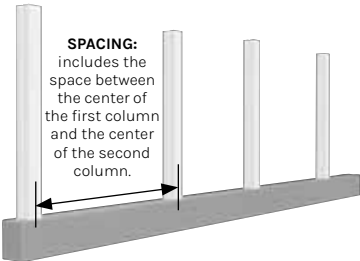


Place the initial post on the base and mark the holes on the concrete slab or curb.

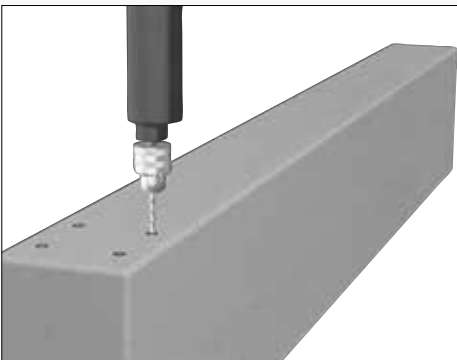

Drill the holes.

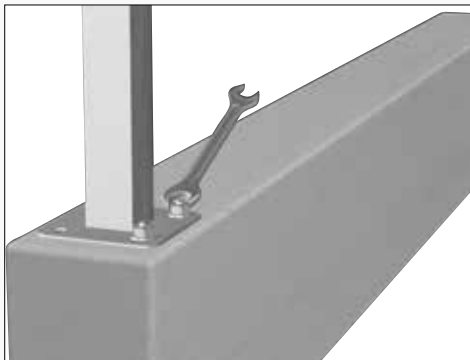


Place the galvanized post and fix it.

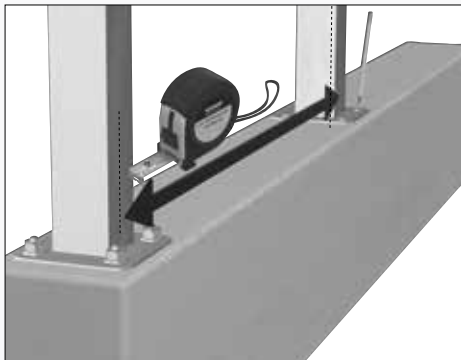

Measure the position of the next galvanized post (from column center to column center).


! **DO NOT INSTALL ALL POSTS!**
Proceed progressively to correct any calculation errors.

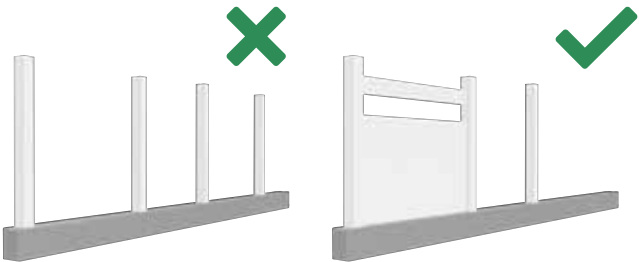


02. slats installation

! If the spacing has been respected, there will be 5mm space on both sides between the end of the slat and the columns, so as not to damage the structure in case of thermal expansion of the WPC Bamboo boards.
VALID FOR ALL TYPES OF FENCING, INCLUDING THOSE SUBJECT TO POSSIBLE MODIFICATIONS.

SLAT INSTALLATION - **PRIVACY TREND DELUXE** AND **PRIVACY DELUXE**

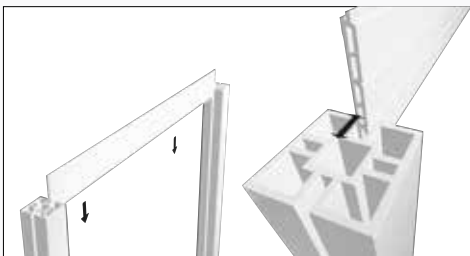


Insert "Privacy" slats by inserting them from above into the WPC column groove.

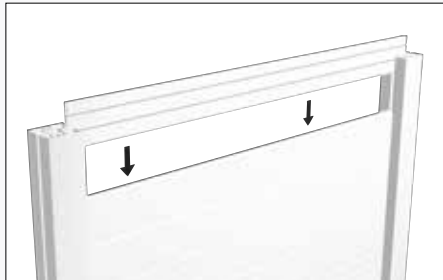


Insert the finishing slat last.


SLAT INSTALLATION - **VEDO NON VEDO TREND DELUXE** AND **VEDO NON VEDO DELUXE**

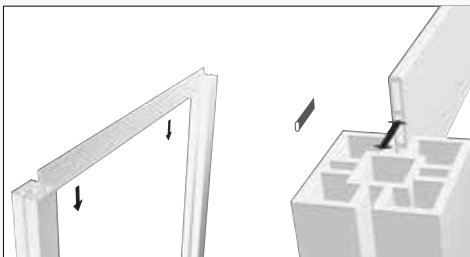

Insert "Vedo non vedo" slats with the reinforcement core (20x10 mm cold galvanized) by inserting them from above into the slot of the WPC column.

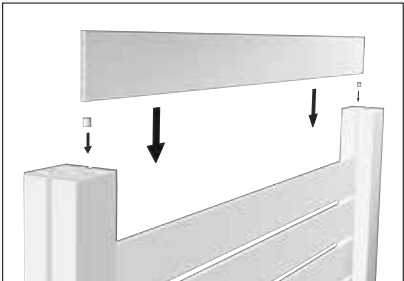

Between one slat and another, spacers must be inserted by threading them from above into the channels of the column.

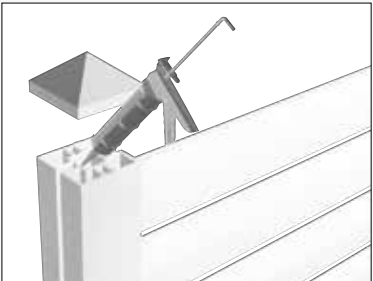

Close the top of the column with a closure cap with screws or two-component epoxy glue.



VIDEO
PRIVACY
TREND DELUXE



VIDEO
PRIVACY
DELUXE



VIDEO
VEDO NON VEDO
TREND DELUXE



VIDEO
VEDO NON VEDO
TREND DELUXE

03. closure kit

CLOSURE KIT INSTALLATION - **PRIVACY LINE**



Insert the reinforcement core in the upper part of the beveled privacy slat.



Position the closure kit in the upper part and fix with the screw in the reinforcement core.



Insert kit and slat into the post, adjusting the position.



Insert the kit on both sides of the slat.



Insert the kit completely.



Proceed with inserting the cap.

CLOSURE KIT INSTALLATION - **VEDO NON VEDO LINE**



Position the closure kit in the upper part and fix with the screw in the reinforcement core.



Insert kit and slat into the post, adjusting the position.



Insert the kit on both sides of the slat.



Insert the kit completely.



Proceed with inserting the cap.