

Installation Instructions

CLASSIC AND PROFESSIONAL CLADDING INSTALLATION

Joist center distance - vertical slats



Install the aluminum joists on a regular and smooth surface. Respect the distances as shown in the drawing.



Vertical installation details.



After fixing the joists use the start clip using clip code AF602 to fix the first slat, then continue the installation using clip code AF601.

POSA IN LINEA



POSA SFALSATA



* Min 300 mm
Max 400 mm

Measurements that must be respected for the validity of the warranty. *

Thermal expansion


Ambient temperature (°C)	Example length of slats to install and mm of gap to maintain only from the longitudinal part (ends) of the slats **				
°C	Example length of slats to install				
	m.l. 1.00	m.l. 1.50	m.l. 2.00	m.l. 2.50	m.l. 3.00
Dimension in mm of the longitudinal gap between the slats (at the end)					
10	2,70	4,10	5,40	6,50	8,10
20	1,80	2,70	3,60	4,30	5,40
25	1,40	2,00	2,70	3,20	4,10
30	0,90	1,40	1,80	2,20	2,70
35	0,50	0,70	0,90	1,10	1,40

in respect of the temperature at the time of installation **

Joist center distance - horizontal slats



Install the aluminum joists on a regular and smooth surface. Respect the distances as shown in the drawing.

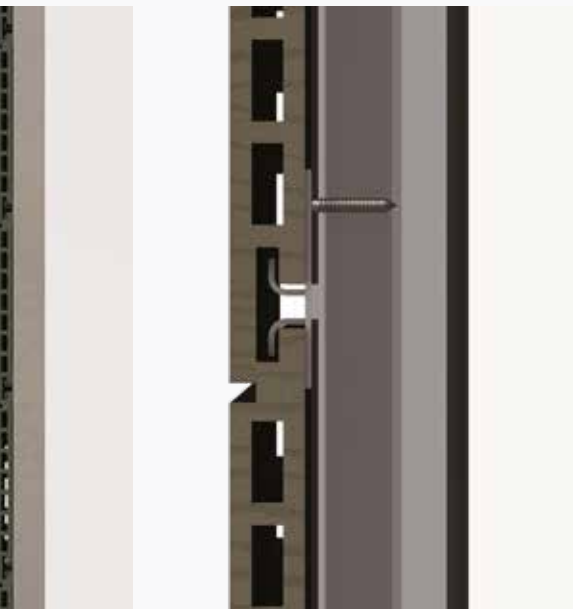

Horizontal installation details with clips.


Instruction video



After fixing the joists use the start clip using clip code AF602 to fix the first slat, then continue the installation using clip code AF601.



IN-LINE INSTALLATION

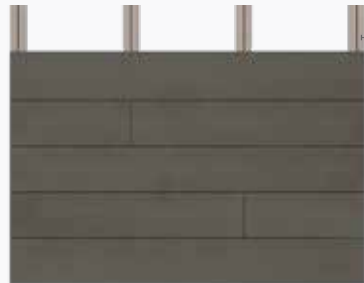


STAGGERED INSTALLATION

* Min 300 mm
Max 400 mm


* Measurements that must be respected for the validity of the warranty.

Installation Instructions





PROFESSIONAL GRECATO AND GRECATO LARGE CLADDING INSTALLATION

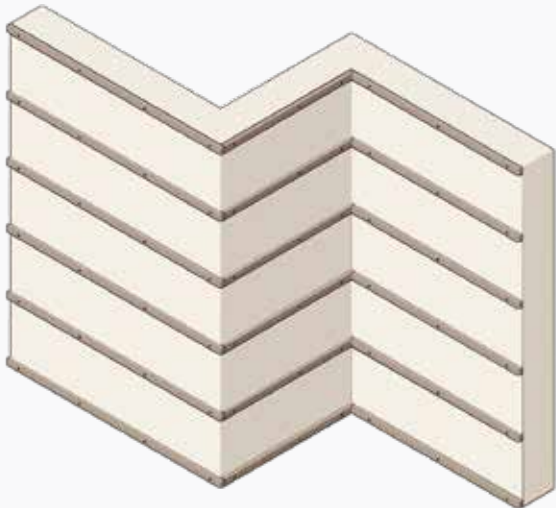




Fastening of joists with maximum center distance of 40 cm.

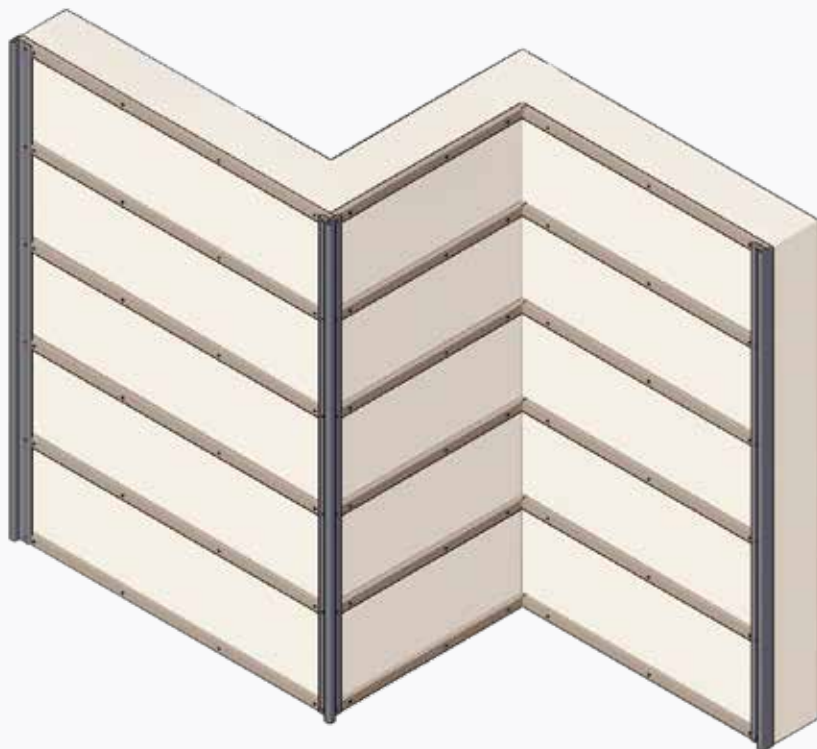



Install the corner start profiles and the terminal.

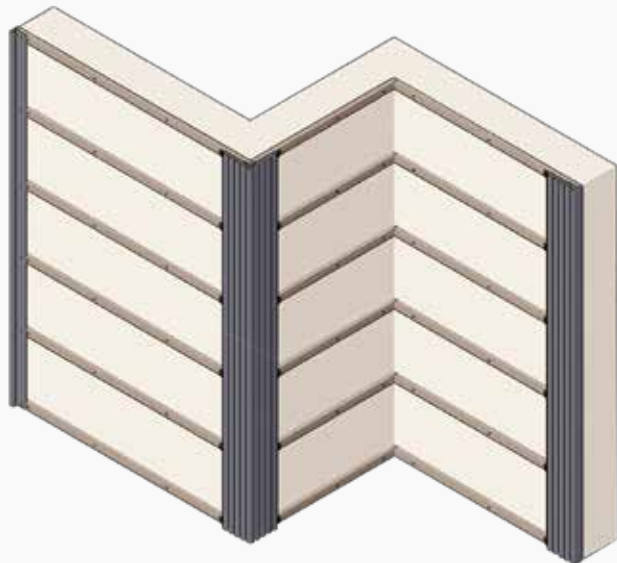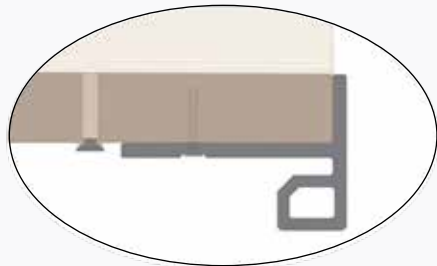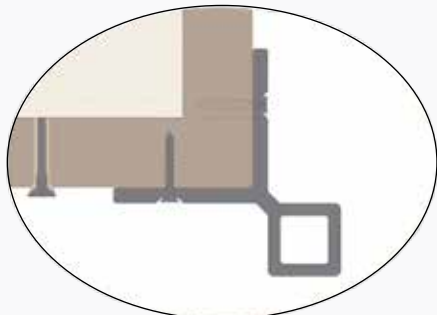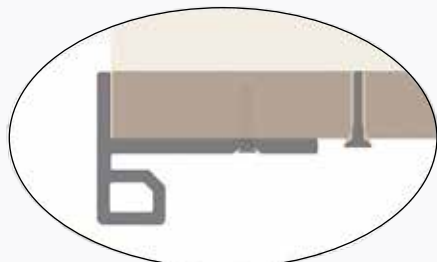

Start the cladding installation.

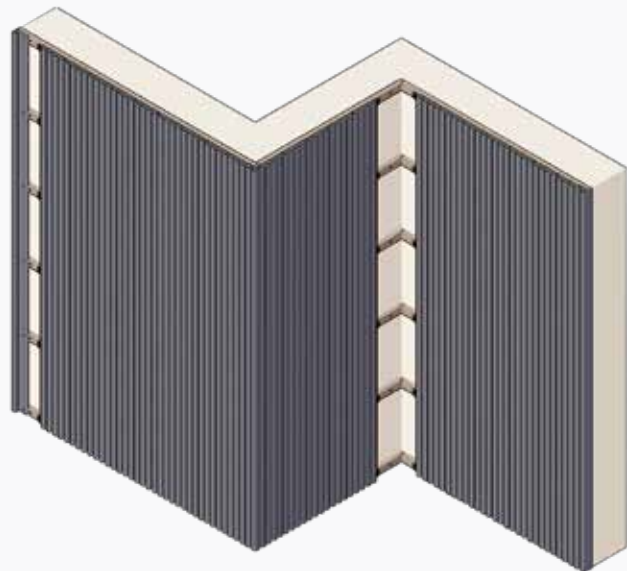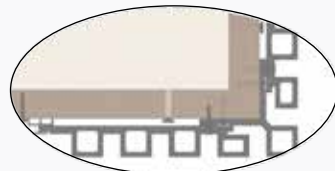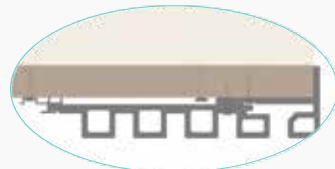

Continue the installation up to the corner.

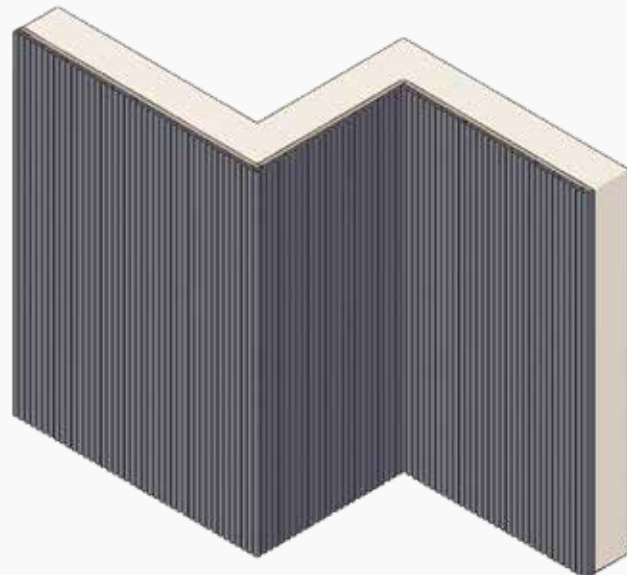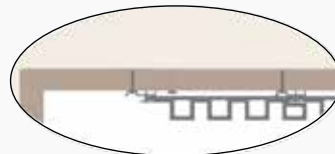

Complete installation.

